COOKTOP MODELS: EG366SCH & EG486SCH

dacor
The Life of the Kitchen®

Trim Replacement Kit, PN AEGTK6

INSTALLATION INSTRUCTIONS

DANGER: Electric shock hazard! Before installation, disconnect power at the circuit breaker or fuse box.

Use these instructions to change the trim color on the EG366 and E486 series cooktops.

Tools Required

- Phillips head screwdriver (4-40)

Kit Part Number Identification

AEGTK6YY

Trim Color
CH = Chrome
CP = Copper
BR = Brass
BC = Black Chrome

Parts included with this kit

Trim Rings (6)

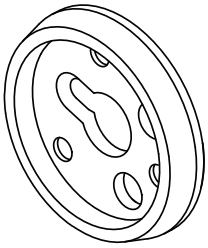

End Caps (2)

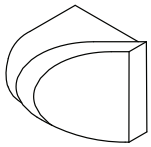

Extra Screws

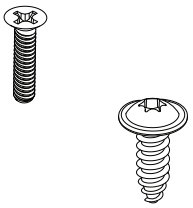

NOTES:

WARNING: To avoid burns, do not disassemble the cooktop until it has cooled.

CAUTION: To prevent damage to the cooktop, use only the tools indicated in these instructions.

NOTE: It is not necessary to remove the cooktop from the cabinet to change the trim color.

Trim Kit Installation Instructions

STEP 1: Disconnect power to the cooktop at the junction or fuse box.

Trim Ring Replacement

STEP 2: Remove the knobs. Pull straight out to remove them. Put them in a safe place to prevent damage.

IMPORTANT: To prevent the parts behind the control panel from being misaligned, remove only one trim ring at a time.

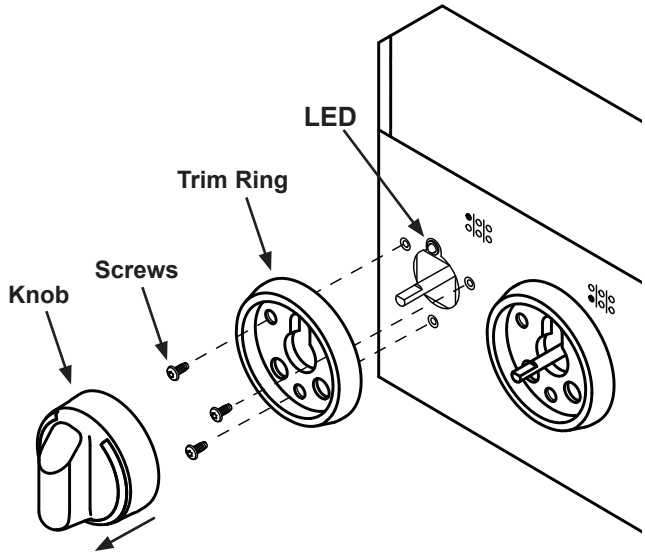

STEP 3: Remove the three (3) phillips head screws that hold the existing trim ring in place. Note the position of the blue LED light located behind the trim ring.

STEP 4: While making sure the LED remains in place, put the new trim ring into position. Tighten it in place with the three (3) phillips head screws.

STEP 5: Repeat steps 3 and 4 for the remaining trim rings.

STEP 6: After all the trim rings are replaced, check to make sure they are all properly aligned, that the LEDs are in the proper place, and that the screws are tightened.

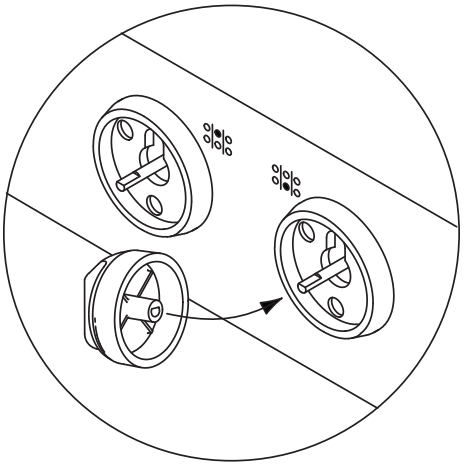

STEP 7: Attach the knobs. Align the “D-shaped” opening on the back of the knob with the end of the valve shaft. Carefully push the knob on until it stops. Put the knobs with the words “**MAX GRIDDLE**” on them on the inner (center burner) valve shafts. Put the remaining knobs on the outer valve shafts.

⚠ **CAUTION:** To prevent damage to the griddle included with the cooktop, do not install the griddle knobs in the wrong position!

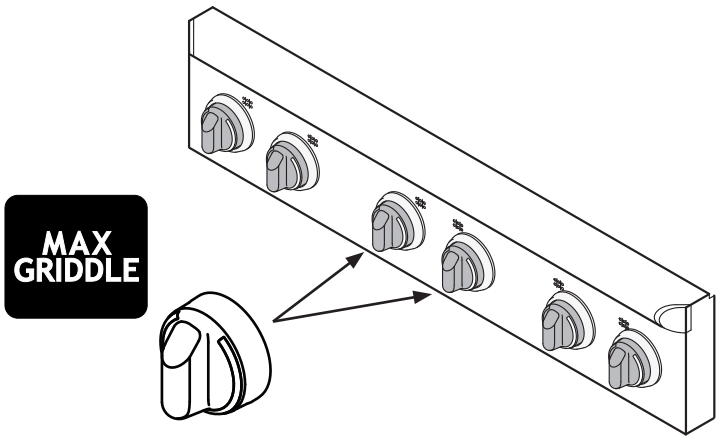

End Cap Replacement

STEP 8: Locate the right end cap screw access hole under the right side of the front panel overhang. Remove the 4-40 X 1/2 phillips head screw.

STEP 9: Pull the end cap out of the side of the range to remove it. Insert the new end cap in its place.

STEP 10: Thread the end cap screw and tighten by hand. Do not over-tighten.

STEP 11: Repeat sets 8 - 10 for the left end cap.

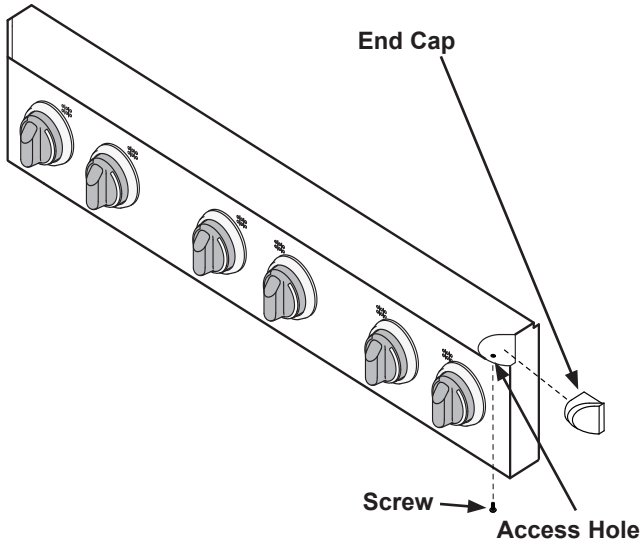

dacor®
The Life of the Kitchen.®

Family Owned
American Made

Dacor ● 600 Anton Blvd. Suite 1000 Costa Mesa, CA 92626 ● Phone: (800) 793-0093 ● Fax: (626) 403-3130 ● www.Dacor.com